



dBR-D1 VOICE RECORDER

User Manual

Thank you for purchasing this product. This is your Quick Start Guide, which tells you about the basic operations of the recorder. Please read it carefully before using this product.

1. Precautions

Charging

Please do not use the recorder or leave it in a location accessible to children during the charging process.

Protecting Files

Please do not press the power switch to prevent the current recording from being lost during the recording process.

Interference

If placed near other electronic devices, the functions of this device maybe adversely affected. To prevent this, please keep this recorder away

from such other devices.

Backup

 
We recommend backing up your files regularly to prevent loss of data due to external errors or operation failure.

Transfer of Data

Do not disconnect the recorder from your computer during the data transfer process to prevent data loss.

2.Parts and Controls

dBR-D1 Voice Recorder

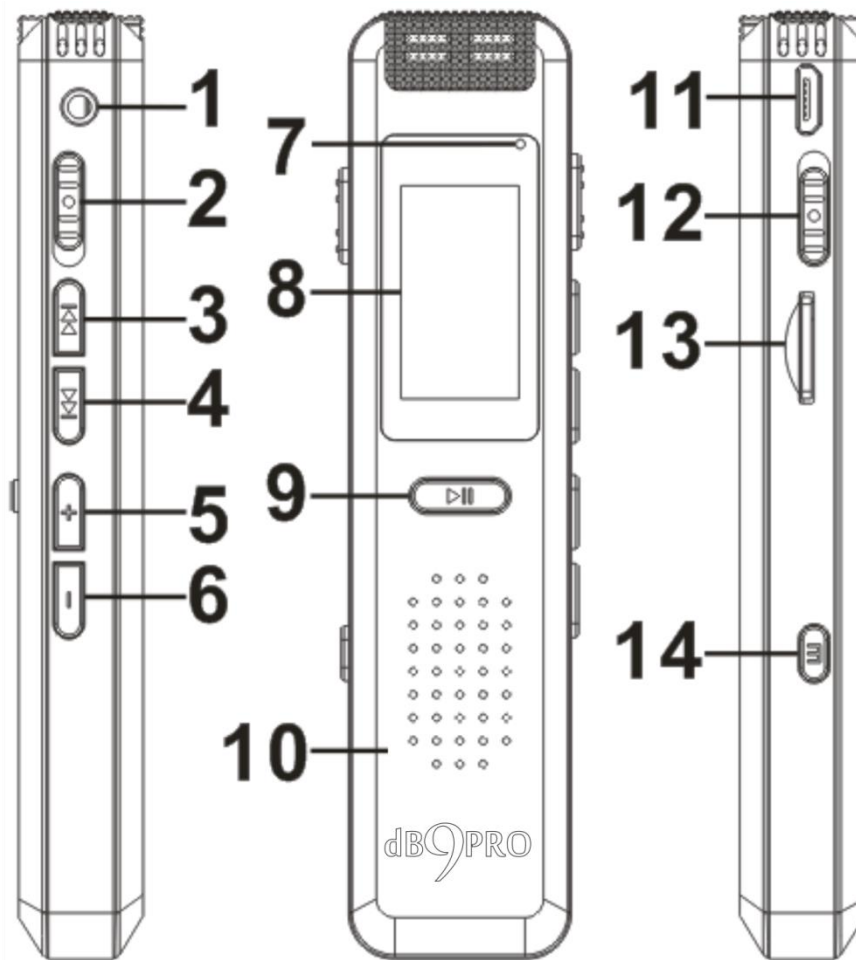

1. Headphone jack
2. Record/Save button
3. Rewind/Previous file button
4. Fast forward/Next file button
5. Volume up button
6. Volume down button
7. Pilot light
8. Screen
9. Pause/Play button
10. Speaker

dBR-D1 Voice Recorder

11.USB port

12.Power switch

13.Expansion CARDS

14.Menu button

3.Charging



The power switch on the recorder must be ON. Please connect the recorder to your computer via the USB cable (supplied).

 
Insert the micro USB end of the cable to the recorder, and the USB end to the USB port of a computer which is ON. You may also use a phone charger.

When the recorder is charging, the screen will show the battery charge indicator at the top right.



4. Turning Power On

Turn on the power switch and turn on the recorder.

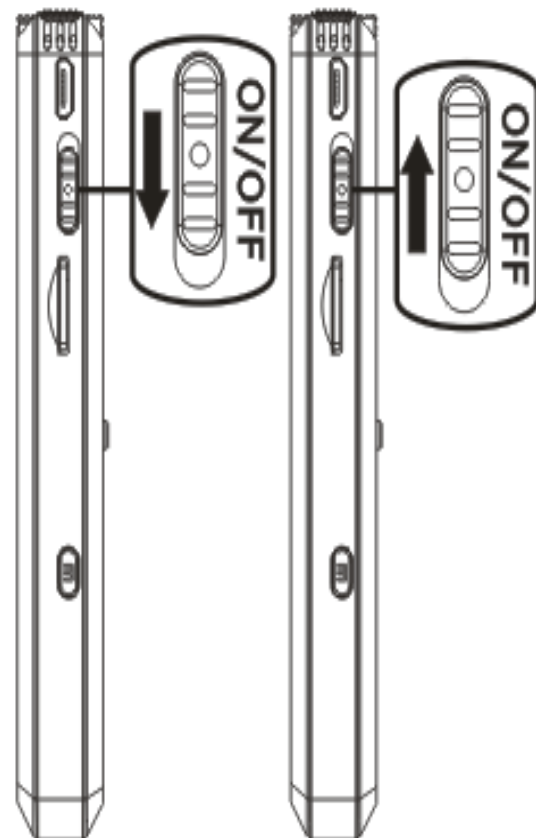



5. Turning Power Off

Slide down the “Power switch”, and the recorder is switched OFF.


❖ Hint

When the recorder is not in playback mode, and if there is no activity for 5 minutes, the recorder will power off automatically. This is the auto power off function and can be set in the menu under “Auto Switch Off”.

  
6. Record/SAVE

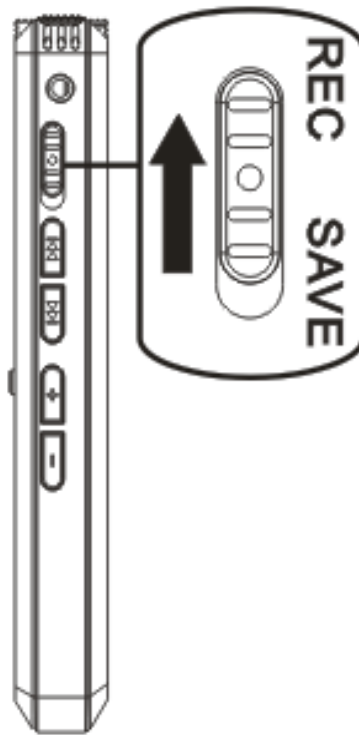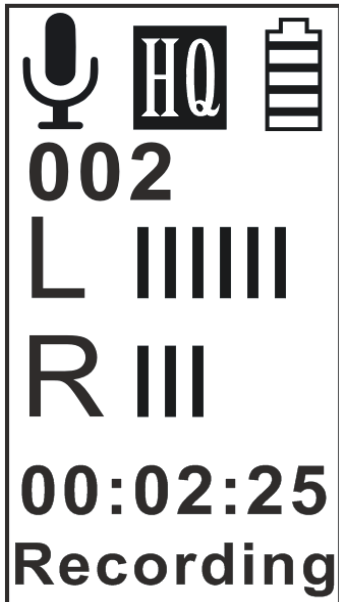

 - Turn on the recording switch to enter recording mode.
- Place the recorder so that the built-in microphones face the direction of the source to be recorded.
- The new file will be automatically recorded as the last file in the current folder.
- Slide down the “Record/Save button”, in the direction of “SAVE” to stop and save your

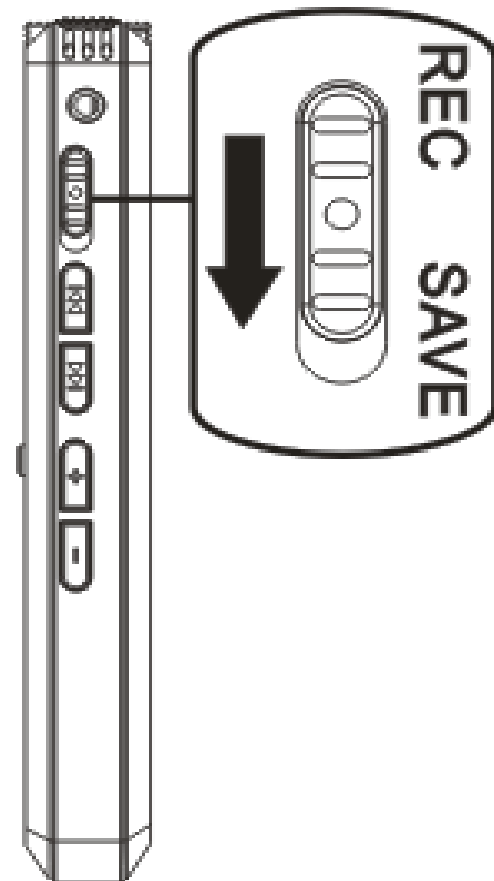

recording.


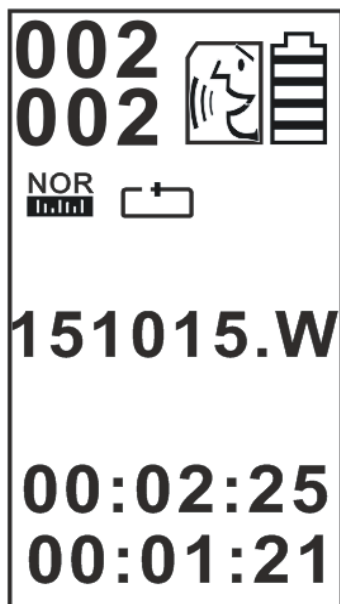 


7. Play

- Press the “**M**” key on the side of the device to switch between the Recording folder/Music folder. Press “▶||” to play.
- Press “◀◀” or “▶▶” button to select the file you want to playback, and then press “▶||” button to start playing the file.
- Press “+” or “-” button to adjust the volume.
- Press “▶||” button to Pause play.



8. "A-B" Repeat Play

  - In PLAY mode, press "M" to select "A". Once "A" starts flashing on the screen, press this button again to select "B", and then the segment "A-B" of the file will start repeating.
- Once selected, it will repeat and play back the A-B interval
- Press "M" again to cancel.

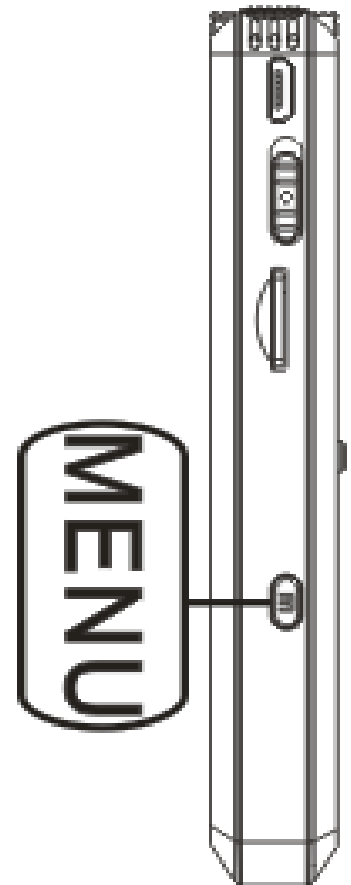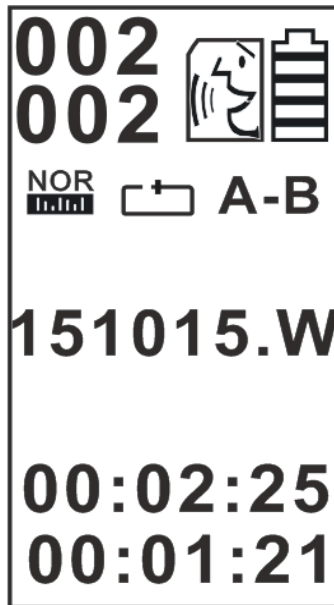

9. Delete

  - When the recorder is in standby mode (not playing a file), select the file you want to delete, hold down "+" or "-" key to enter.
- Press "◀◀" or "▶▶" buttons to

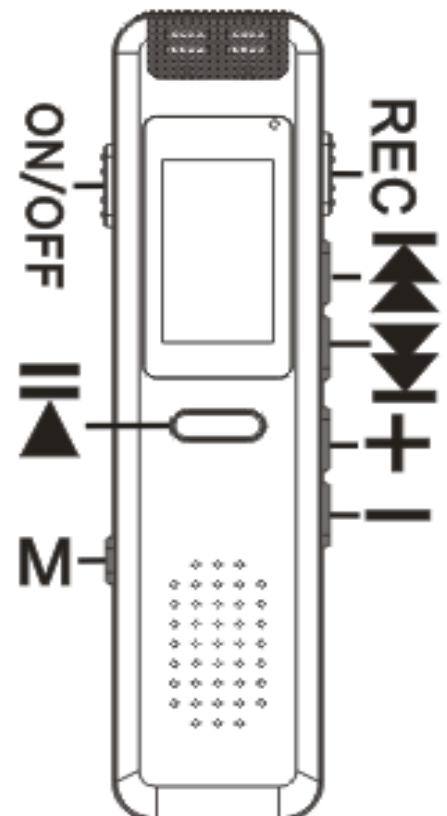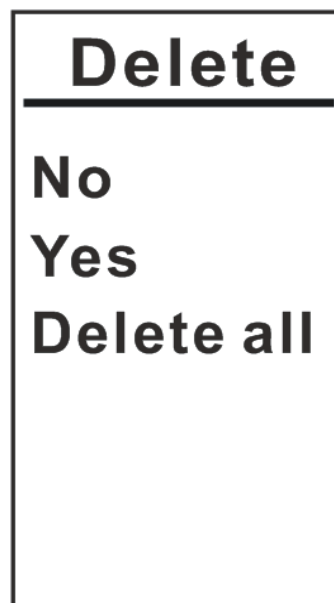

dBR-D1 Voice Recorder

select “No”/“Yes”/“Delete all”. Press "▶||" to confirm your choice.



- “No”: Cancel the Delete process.
- “Yes” : Delete single file.
- “Delete all” : Delete all files in folder.
- Press the “▶||” button to confirm.
- Press “M” to return standby mode.

❖ Note

Once a file has been erased, you cannot retrieve it.

10.MP3 Function

  - Download music to the root directory of the machine through USB.
- Press “M” to enter the MP3 player interface.
- Play music just like playing a recording file.

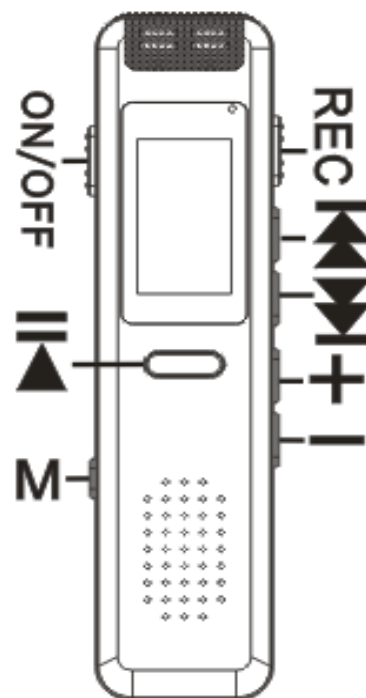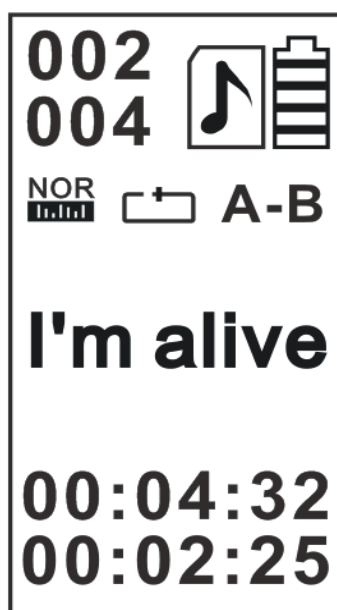

11. Recording Settings


In standby mode, hold down "M" button to enter.

- ❖ For scrolling through the options, press the

dBR-D1 Voice Recorder

“▶||” button to select, press the “M” key to exit.

- Press “▶▶” to select the recording settings, press the “▶||” to enter.

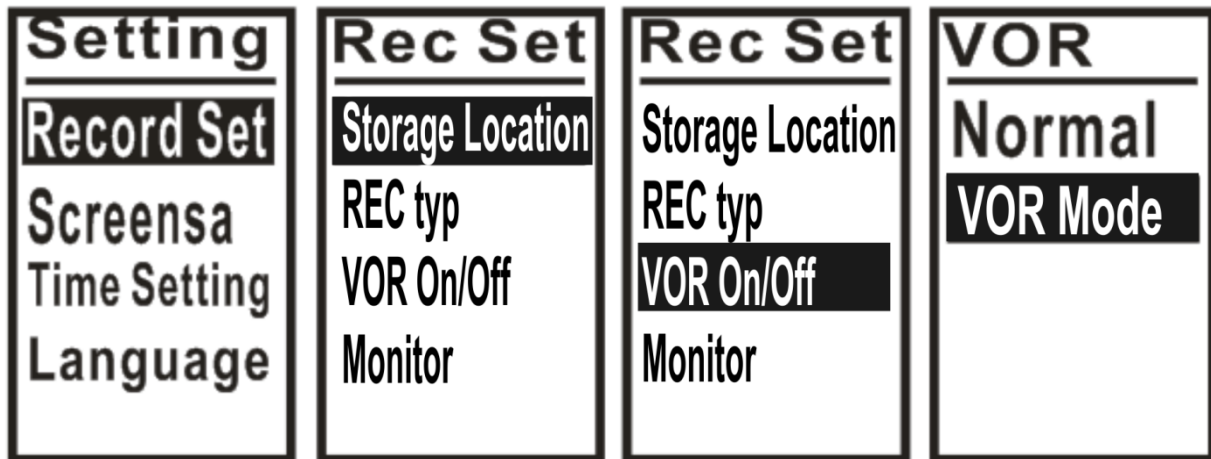 


1) Storage Location

Press "▶▶" briefly, then select "memory", "card", and then press "▶||" to save your recording in your preferred location storage. Press "M" to exit.

2) Record type

 - a. 384K BPS
- b. 192K BPS
- c. 128K BPS
- d. 64K BPS
- e. 32K BPS

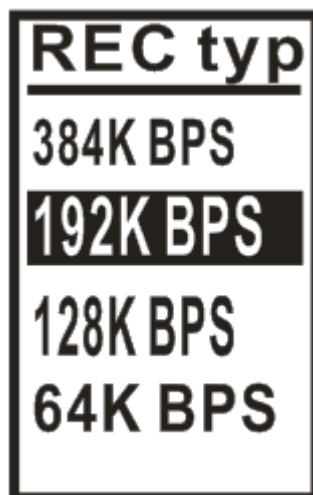

3) Recorder Mode (VOR on/off)

- a. Normal Mode

b. VOR Mode (Voice Activated Recording)

❖ Note

In VOR mode, if the ambient noise level exceeds -40dB, the recorder will start recording. If the ambient noise level drops below this threshold, it will stop recording and resume once the threshold is exceeded. If you want to be ready to record at short notice, you can use this feature, keeping in mind the noise threshold.

4) Recording Monitor: Use this feature

for live monitoring during a recording. This feature needs earphones to be used.

 
 
 
 
a.Disable

b.Enable

5) Noise Reduction: Here you can set the level of noise reduction you prefer.

6) VOR Level

When the sound recording

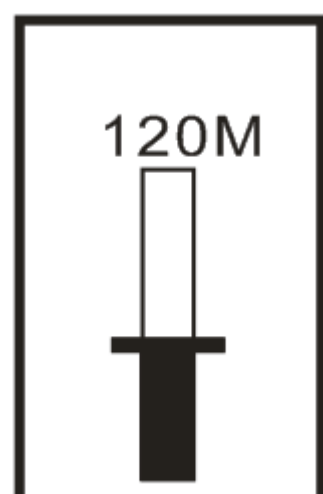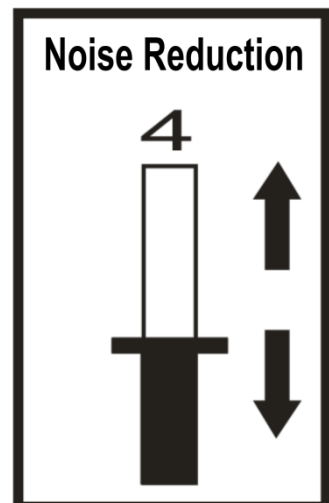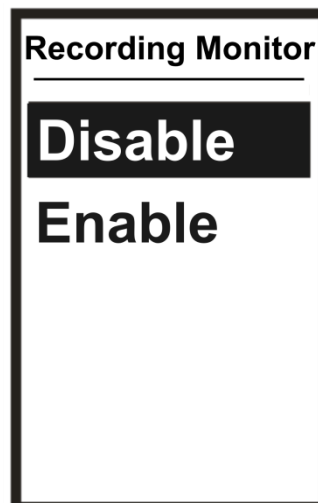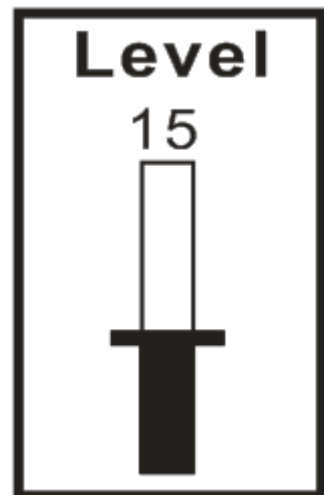

dBR-D1 Voice Recorder

is turned on, it can adjust the level of the input.

7) LED Set

a. Close

b. Open

8) Record Subsection

Based on requirements, recording files can be divided into: 30 minutes, 60 minutes, and all the way upto 360 minutes, in 30 minute increments.

12. Screensaver Time

❖ You can scroll through the various options for this feature using “◀◀” or “▶▶”. Please press “▶▶||” to confirm, and press “M” to exit.

1) Open

 
2) 5 S

3) 10 S

4) 20 S

5) 30 S

Save battery charge by selecting screen saver settings.

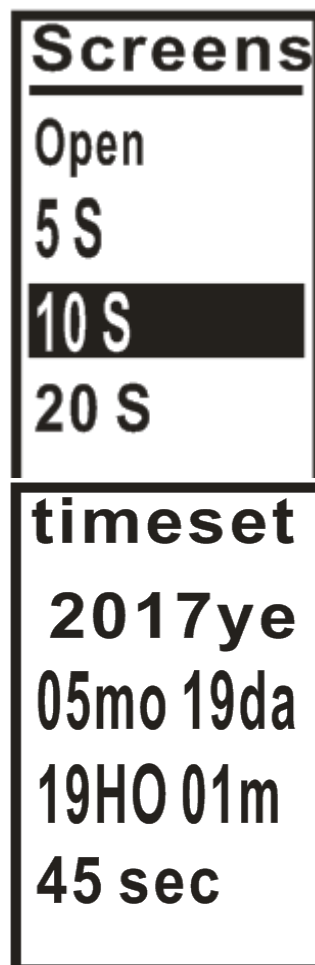

13. Time Settings

dBR-D1 Voice Recorder

❖ You can select and press “▶||” to confirm, and press “M” to exit.

1) Press “▶▶” to select the desired position.

2) Press “+/-” to adjust the number.

14. Language

❖ Please press “▶||” to confirm, and press “M” to exit.

1) Scroll through the options and select your preferred choice.

2) Multi language support

Language

Simple

Trad ch

English

Japanese

15. Tools

❖ For this function, select the option, then press the “▶||” button to confirm, and press the “M” key to exit.

1) Auto Record options:

a. Record(Off)

b. Record(On)

Auto Record

Record (Off)

Record (On)

 
Exit

Note: Your recorder time must be synchronized to the current time zone (see time settings).

● Timed recording: The power switch must be ON.

dBR-D1 Voice Recorder

- Set the time at which you want to start recording: Record(On) - (sort of like setting an alarm).
- To adjust the time at which you would like the recording to begin, press “◀◀” or “▶▶” to select the hour or minute, and use “+/-” to adjust the time. Once it is set, you need to also specify the duration of the recording (Length) in minutes. Once set, at the specified time, the recording will start automatically and once it has reached the specified length, the file will be saved and the recorder will go to sleep mode by itself.

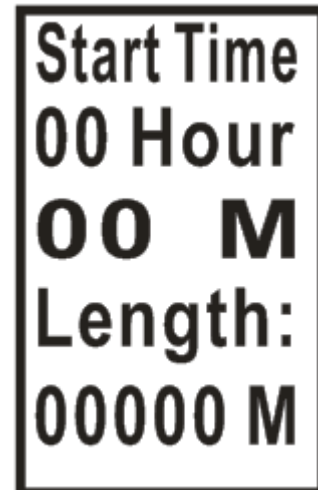

Start Time
00 Hour
00 M
Length:
0000 M

2) Password Switch

- a.Password Off
- b.Password On

- When you select “Password On”, you can set a password to the device.



Password
Password Off
Password On

Password
new PD
0000

3) Password Set

- Press “◀◀” or “▶▶” to adjust position, “+/-” to

 
dBR-D1 Voice Recorder

adjust the number.

- If you have set a password, when you boot with the connection PC you will need a password.
- ❖ Please store your password in a safe place. If you forget the password, enter 9999 and hold down the “**M**” key to bypass the password.

16. Auto switch off


- Close
- 1 Minute
- 5 Minute
- 10 Minute
- 30Minute
- 60Minute

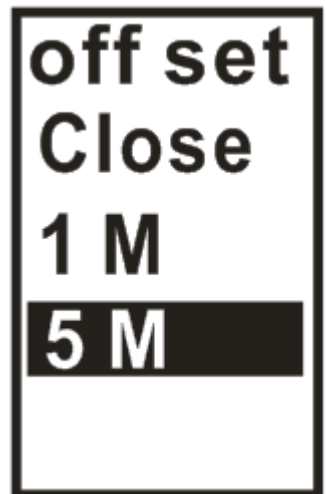

Use the “◀◀” or “▶▶” keys to select your preference in setting the switch off time.

17. Restore factory Settings

 - All settings are restored to the default factory settings.

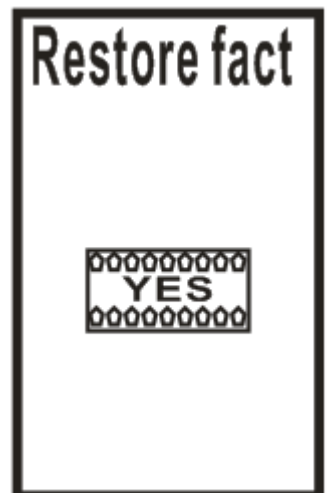


18. Copy Files with PC



Connect the Recorder to the PC via the USB cable.

 Copy files or folders to your computer.

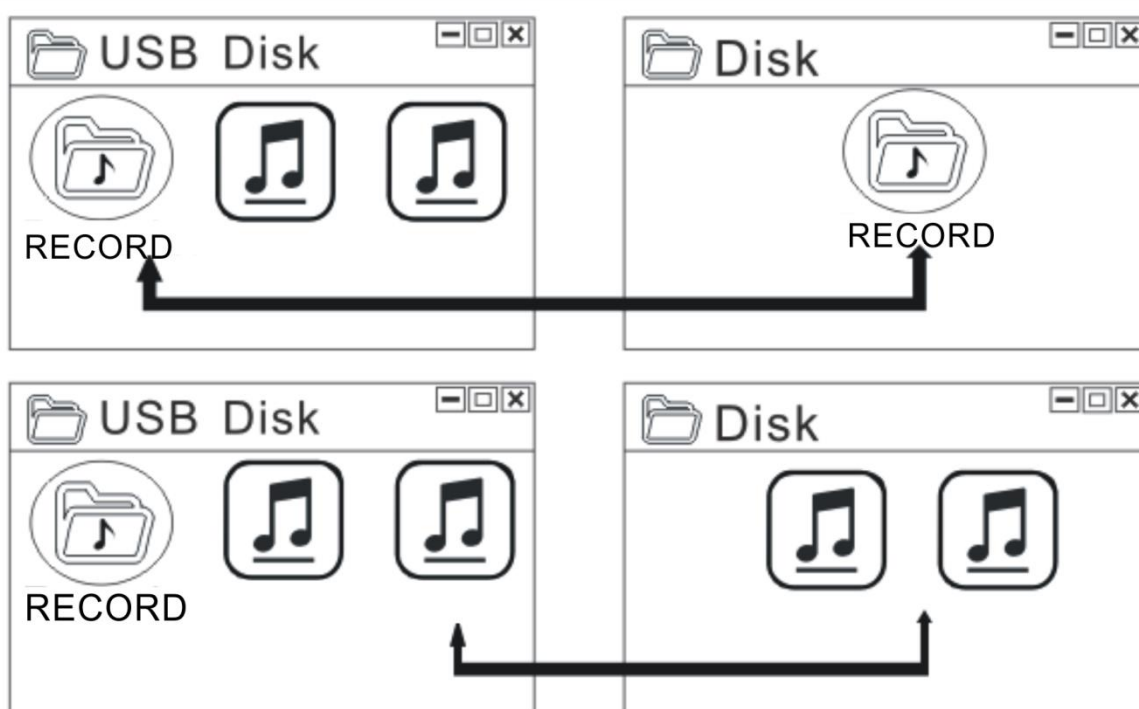

Note

Copy files from the computer to the recorder. Any music files (for mp3 playback on the recorder) must not be put inside the RECORD folder. They should be simply copied to the root directory.

dBR-D1 Voice Recorder

General Specifications:

Display screen		96*64 LCD screen		
Disk Capacity		8GB/16GB/32GB		
Product size		4.03 x0.94x0.53 Inches		
Weight		2.40 Oz		
Recording Format		WAV		
Recording Mode		Microphone		
WAV	Recording	8GB	16GB	32GB
	PCM/384kbps	47hrs	94hrs	188hrs
	SHQ	94hrs	188hrs	376hrs
	HQ	139hrs	278hrs	556hrs
	SP Rec/64kbps	278hrs	556hrs	1112hrs
	LP Rec/32kbps	560hrs	1120hrs	2240hrs
Music Format		MP3, WAV		
Interface		USB2.0		
Usage Temperature		0°C~45°C		
Power Supply		Built-in lithium polymer		
Battery Capacity		1100mAh		
Earphone jack		3.5 mm Stereo		
Built in speaker		8Ω1W		